

<i>Marca</i>		<b>Canon</b>	<b>Nikon</b>	<b>Sony</b>		<b>Panasonic</b>
<i>Modelos [0]</i>		1DX II / 5D Mark II / 5D Mark III 5D Mark IV / 5DS / 5DSR / 6D / 60D 70D / 80D / 600D / 650D / 700D	D850	A7 / A7S2 / A7R / A7M2 A9 / A7S2 / A7R2 / A7M3 A7R3 / A6300 / A6500	RX100M4 RX100M5 RX100M6	GH4 GH5 GH5S
<i>Cable</i>		ZW-Mini-002 / ZW-Micro-002	ZW-Micro-002	ZW-MULTI-001 / ZW-MULTI-002		ZW-CTIA-002
<b>CONTROLES</b>	<b>Follow Focus</b>	✓	✓	-	-	-
	<b>Fotografía</b>	✓	✓	✓	✓	✓
	<b>Grabación</b>	✓	✓	✓	✓	✓
	<b>Av</b>	✓	✓	-	-	-
	<b>Tv</b>	✓	✓	-	-	-
	<b>ISO</b>	✓	✓	-	-	-
	<b>Comp. Exp.</b>	✓	✓	-	-	-
	<b>Servo mecánico</b>	✓*[2]	✓*[2]	✓*[2]	-	-
	<b>Zoom</b>	-	-	✓	✓	-
<b>EXTRAS</b>	<b>Carga cámara</b>	✓	✓	A7, A7S2, A7R, A7M2	✓	✓
	<b>Carga y grabación simultánea</b>	-	-	A9 / A7S2 / A7R2 / A7M3 A7R3 / A6300 / A6500	✓	-
	<b>Acciona AF al apretar el disparador a la mitad</b>	✓	-	-	-	✓

[0] Cámaras probadas.

[2] El Servo Follow Focus externo soporta la mayoría de los objetivos, incluidos los manuales.